



| Num | Material number | Description | Quantity | | | | |
|-----|-----------------|----------------------|----------|----|------------|------------------|------|
| 1 | 9401-00087 | bolt | 4 | 23 | 1700-00078 | Adjustment gland | 2 |
| 2 | 1700-00076 | Lock piece | 2 | 24 | 1700-00079 | Spacer shim0.1 | some |
| 3 | 1700-00075 | Press plate | 2 | 25 | 1700-00080 | Spacer shim 0.5 | some |
| 4 | 9401-00153 | Detent ring | 2 | 26 | 1700-00081 | Spacer shim 0.05 | some |
| 5 | 9401-00154 | bearing | 2 | 27 | 9401-00150 | bolt | 12 |
| 6 | 1700-00072 | Shear bolt | 4 | 28 | 1700-00401 | End cover | 1 |
| 7 | 1700-00073 | Drive land | 2 | 29 | 9401-00063 | bolt | 12 |
| 8 | 9401-00027 | Grease cup | 2 | 30 | 1700-00392 | gear pair | 1 |
| 9 | 1700-00071 | Wear Sleeves | 16 | 31 | 9401-00156 | Inch bearing | 2 |
| 10 | 9401-00152 | Grease seal | 4 | 32 | 1700-00391 | Output shaft | 1 |
| 11 | 1700-00074 | Primary drive disk | 2 | 33 | 9401-00144 | Detent ring | 1 |
| 12 | 1700-00102 | Main drive land | 2 | 34 | 9401-00145 | bearing | 1 |
| 13 | 9401-00151 | nut | 4 | 35 | 9401-00146 | Inch bearing | 1 |
| 14 | 9401-00140 | bolt | 24 | 36 | 1700-00062 | Distance sleeve | 1 |
| 15 | 2305-10010 | Fuel level line | 3 | 37 | 1700-00063 | Spacer shim 0.1 | some |
| 16 | 9401-00054 | O-ring | 3 | 38 | 1700-00064 | Spacer shim 0.5 | some |
| 17 | 9401-00078 | bolt | 12 | 39 | 1700-00065 | Spacer shim 0.05 | some |
| 18 | 1700-00459 | Rear end cover | 1 | 40 | 1700-00403 | Spacer shim | some |
| 19 | 9401-00280 | Counterbalance valve | 1 | 41 | 1700-00390 | Bearing pedestal | 1 |
| 20 | 1700-00454 | Welding box | 1 | 42 | 9401-00147 | bolt | 8 |
| 21 | 1700-00388 | Oil weir | 1 | 43 | 9401-00149 | Inch bearing | 1 |
| 22 | 9401-00155 | Screw | 24 | 44 | 9401-00148 | Grease seal | 1 |
| | | | | 45 | 1700-00066 | Input flange | 1 |
| | | | | 46 | 1700-00067 | Lock nut | 1 |